



# HP Mini 311 RAM Replacement

This installation guide will provide the necessary information needed to replace the RAM for an HP Mini 311.

Written By: Christian Santoyo



## INTRODUCTION

If you want to increase your computers memory or are having trouble with speed, the RAM is simple to replace in HP Mini 311.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [PC3-10600 2 GB RAM Chip](#) (1)

## Step 1 — Battery



- Lay the laptop on a flat surface, bottom side up and slide the two battery release latches toward the outside of the case.

## Step 2



- Slide the battery away from the device to remove.



## Step 3 — Memory Shield



- With the device still in a bottom side up position, proceed to unscrew the two 4.8mm Phillips 00 screws from the memory shield.

 The screws will remain in the shield.

## Step 4



- Lift the memory shield up and remove from the laptop.

## Step 5 — RAM



- Firmly press on the metal pins located on both sides of the RAM.
- ⓘ One side of the RAM will pop up to form a 40 degree angle with the body of the laptop.
- Simply grab and remove the RAM from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 03:35:35 AM.